






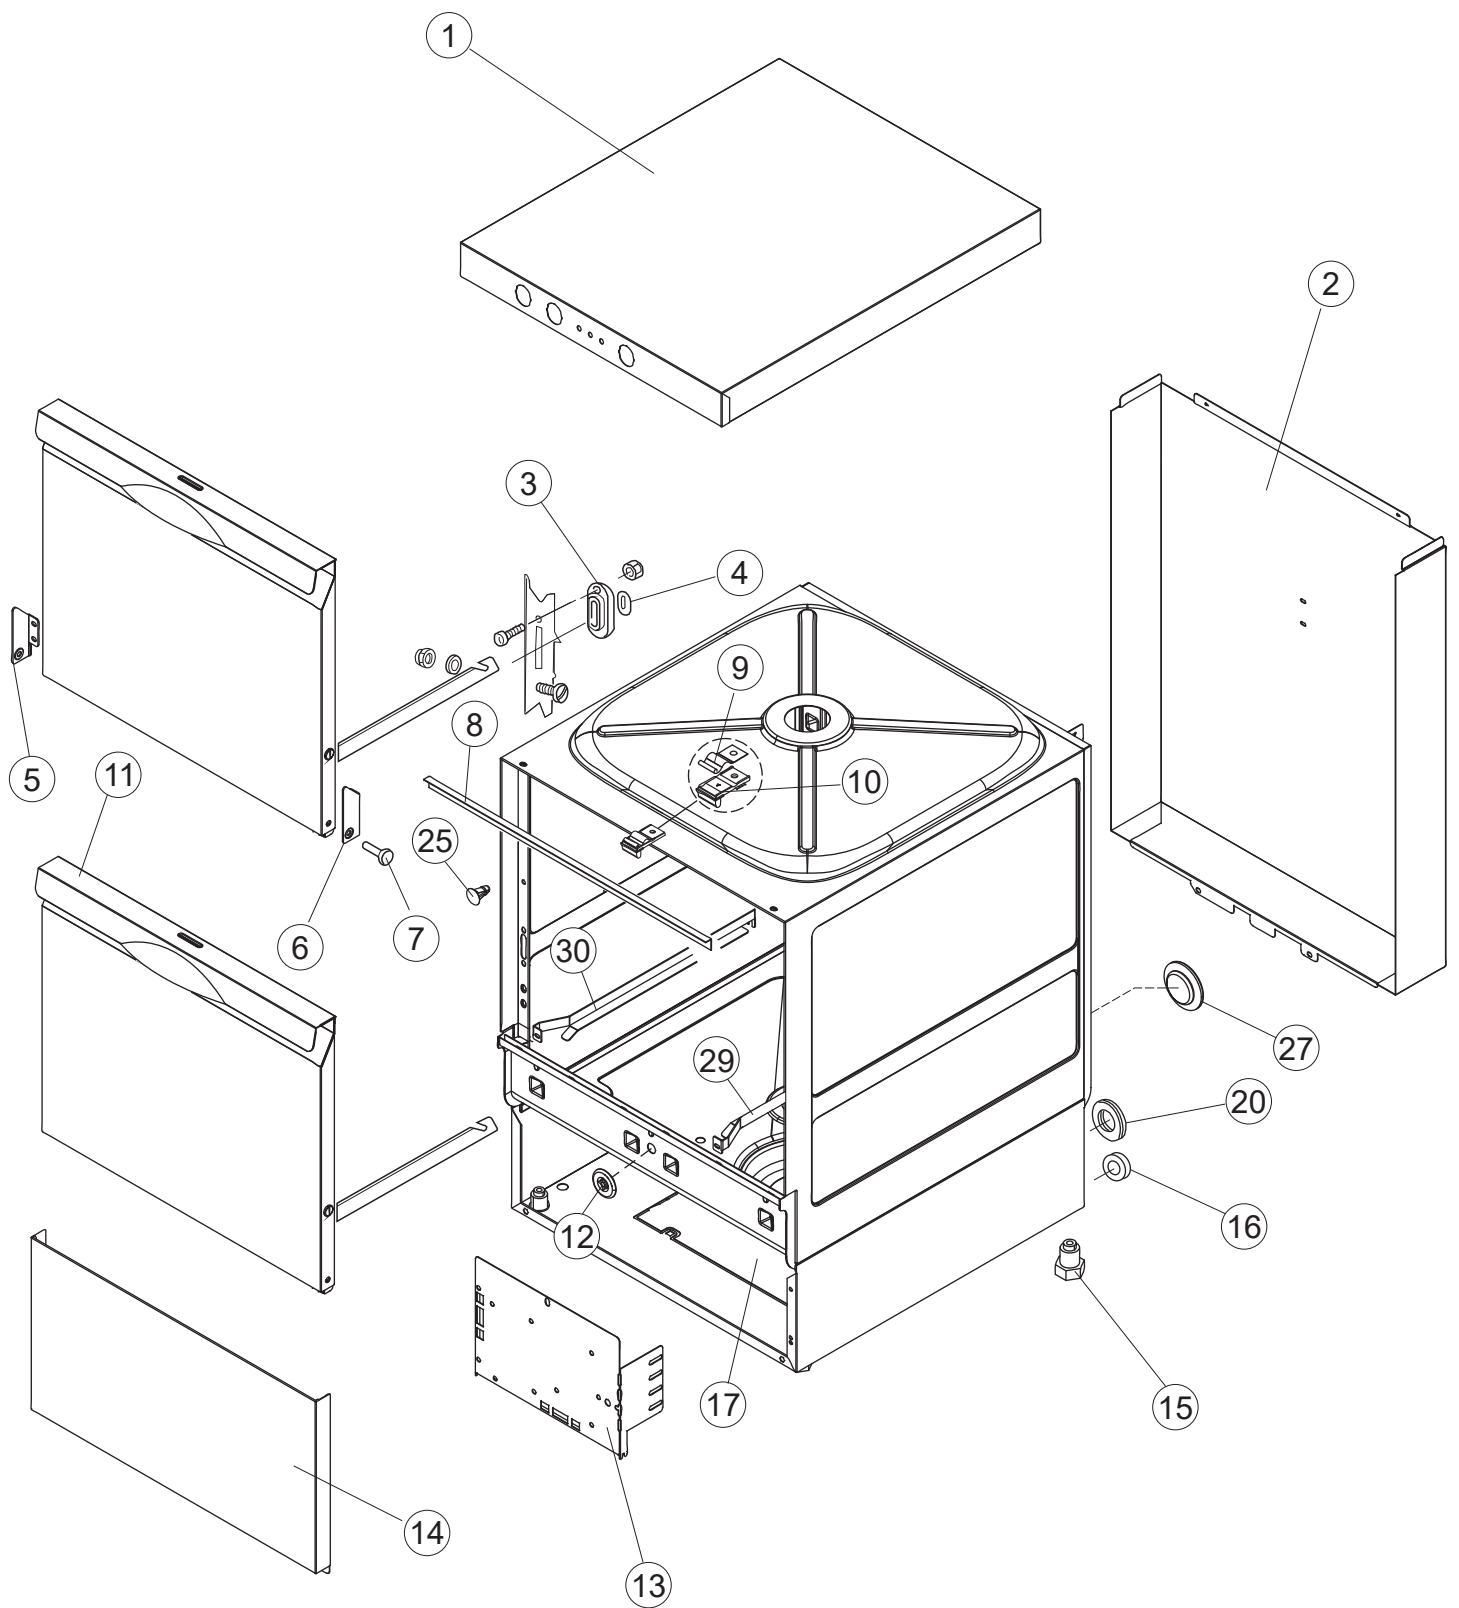


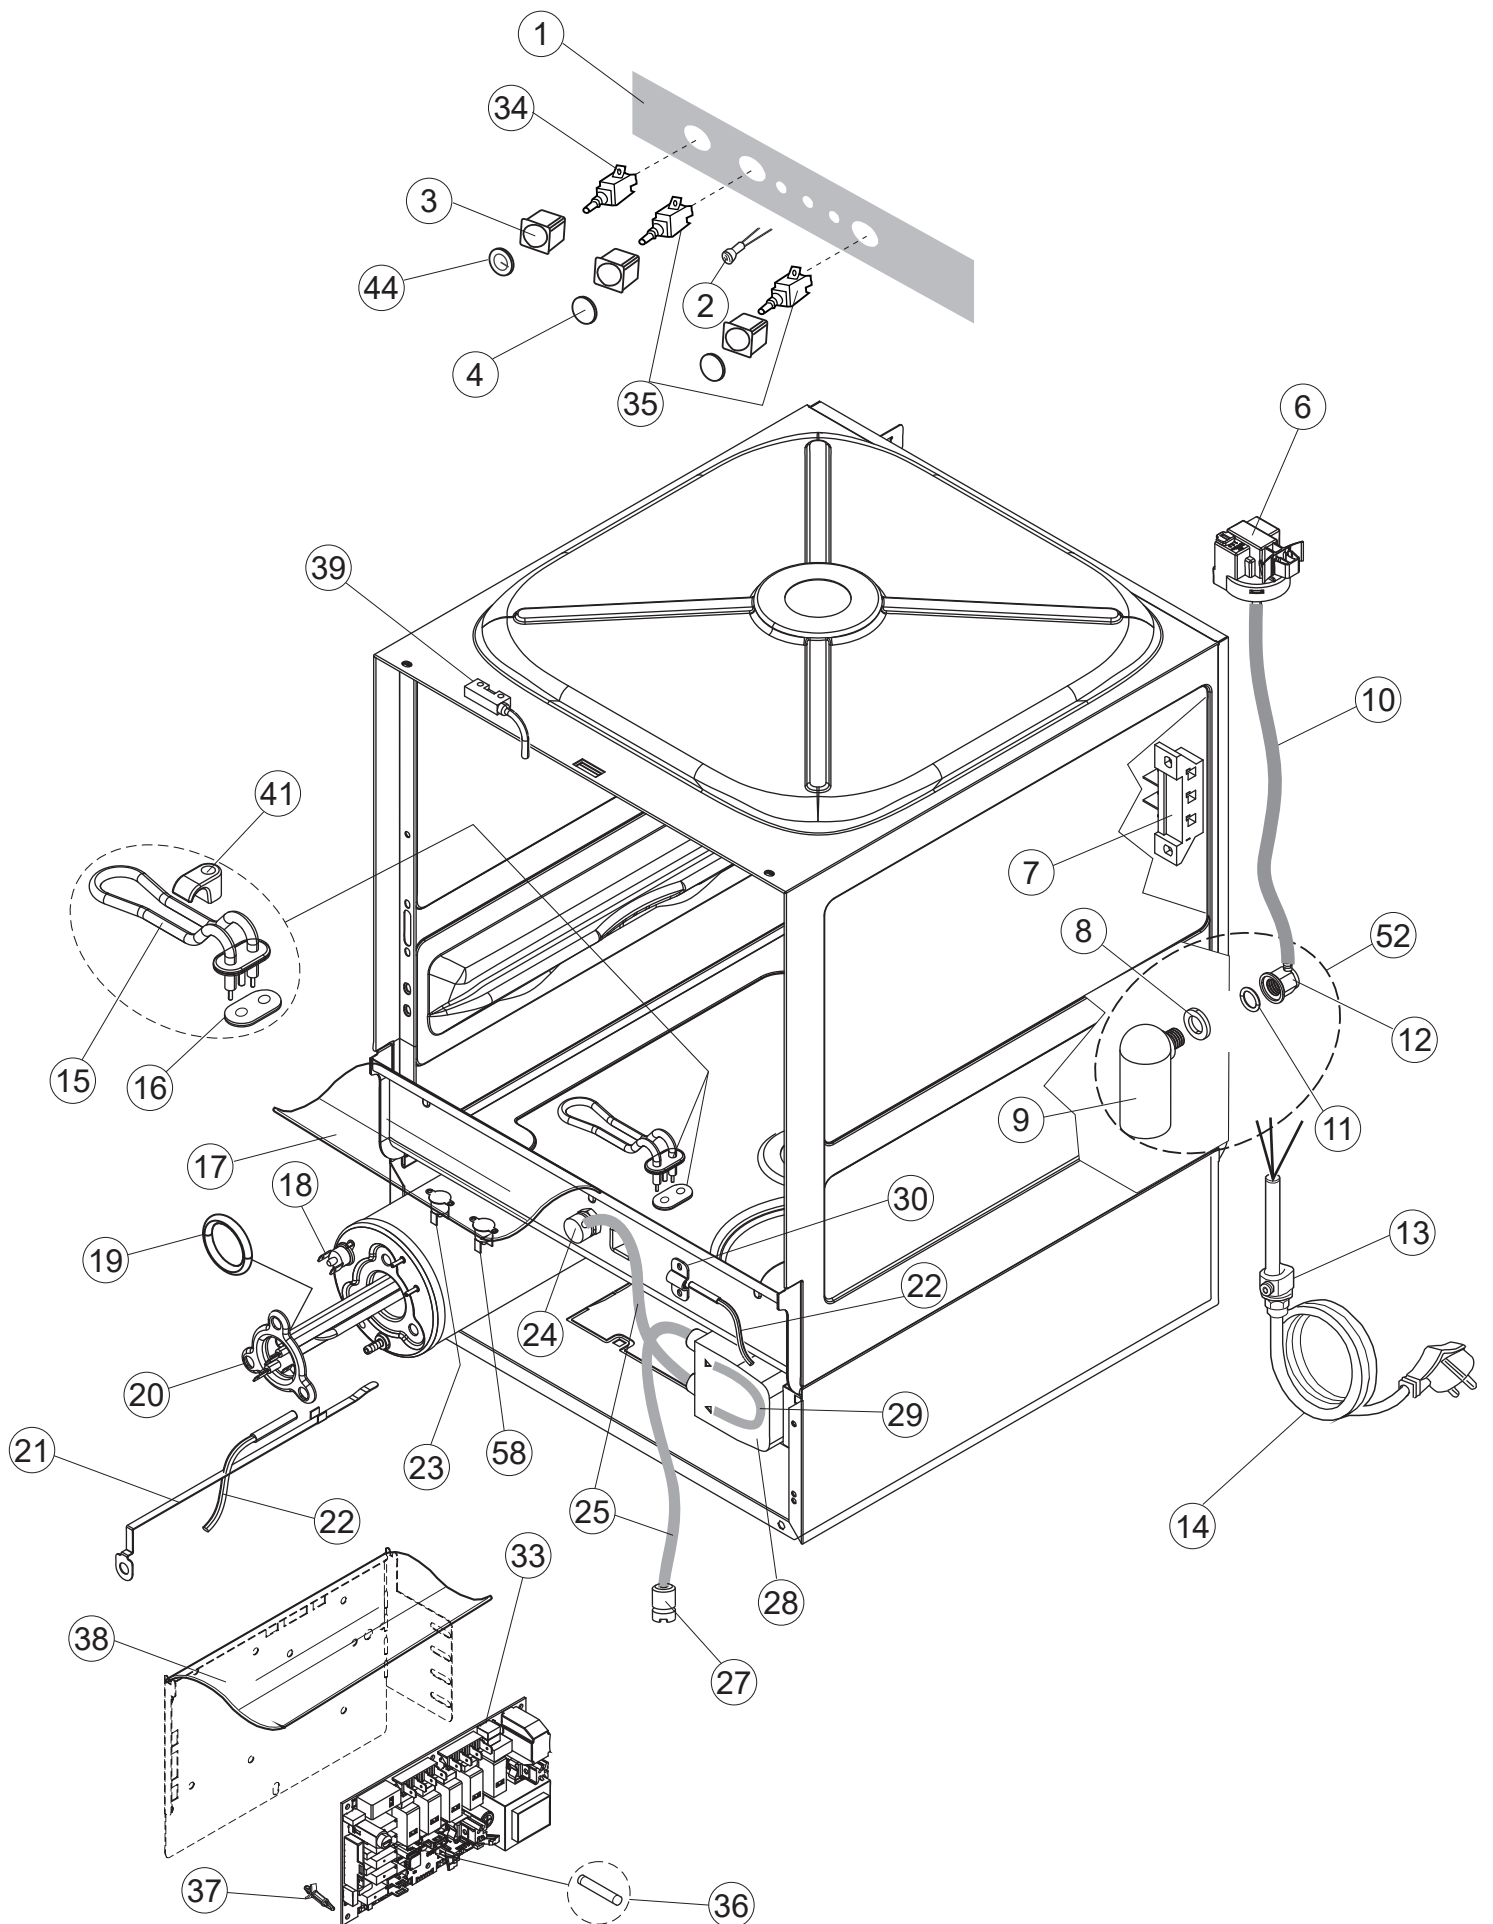


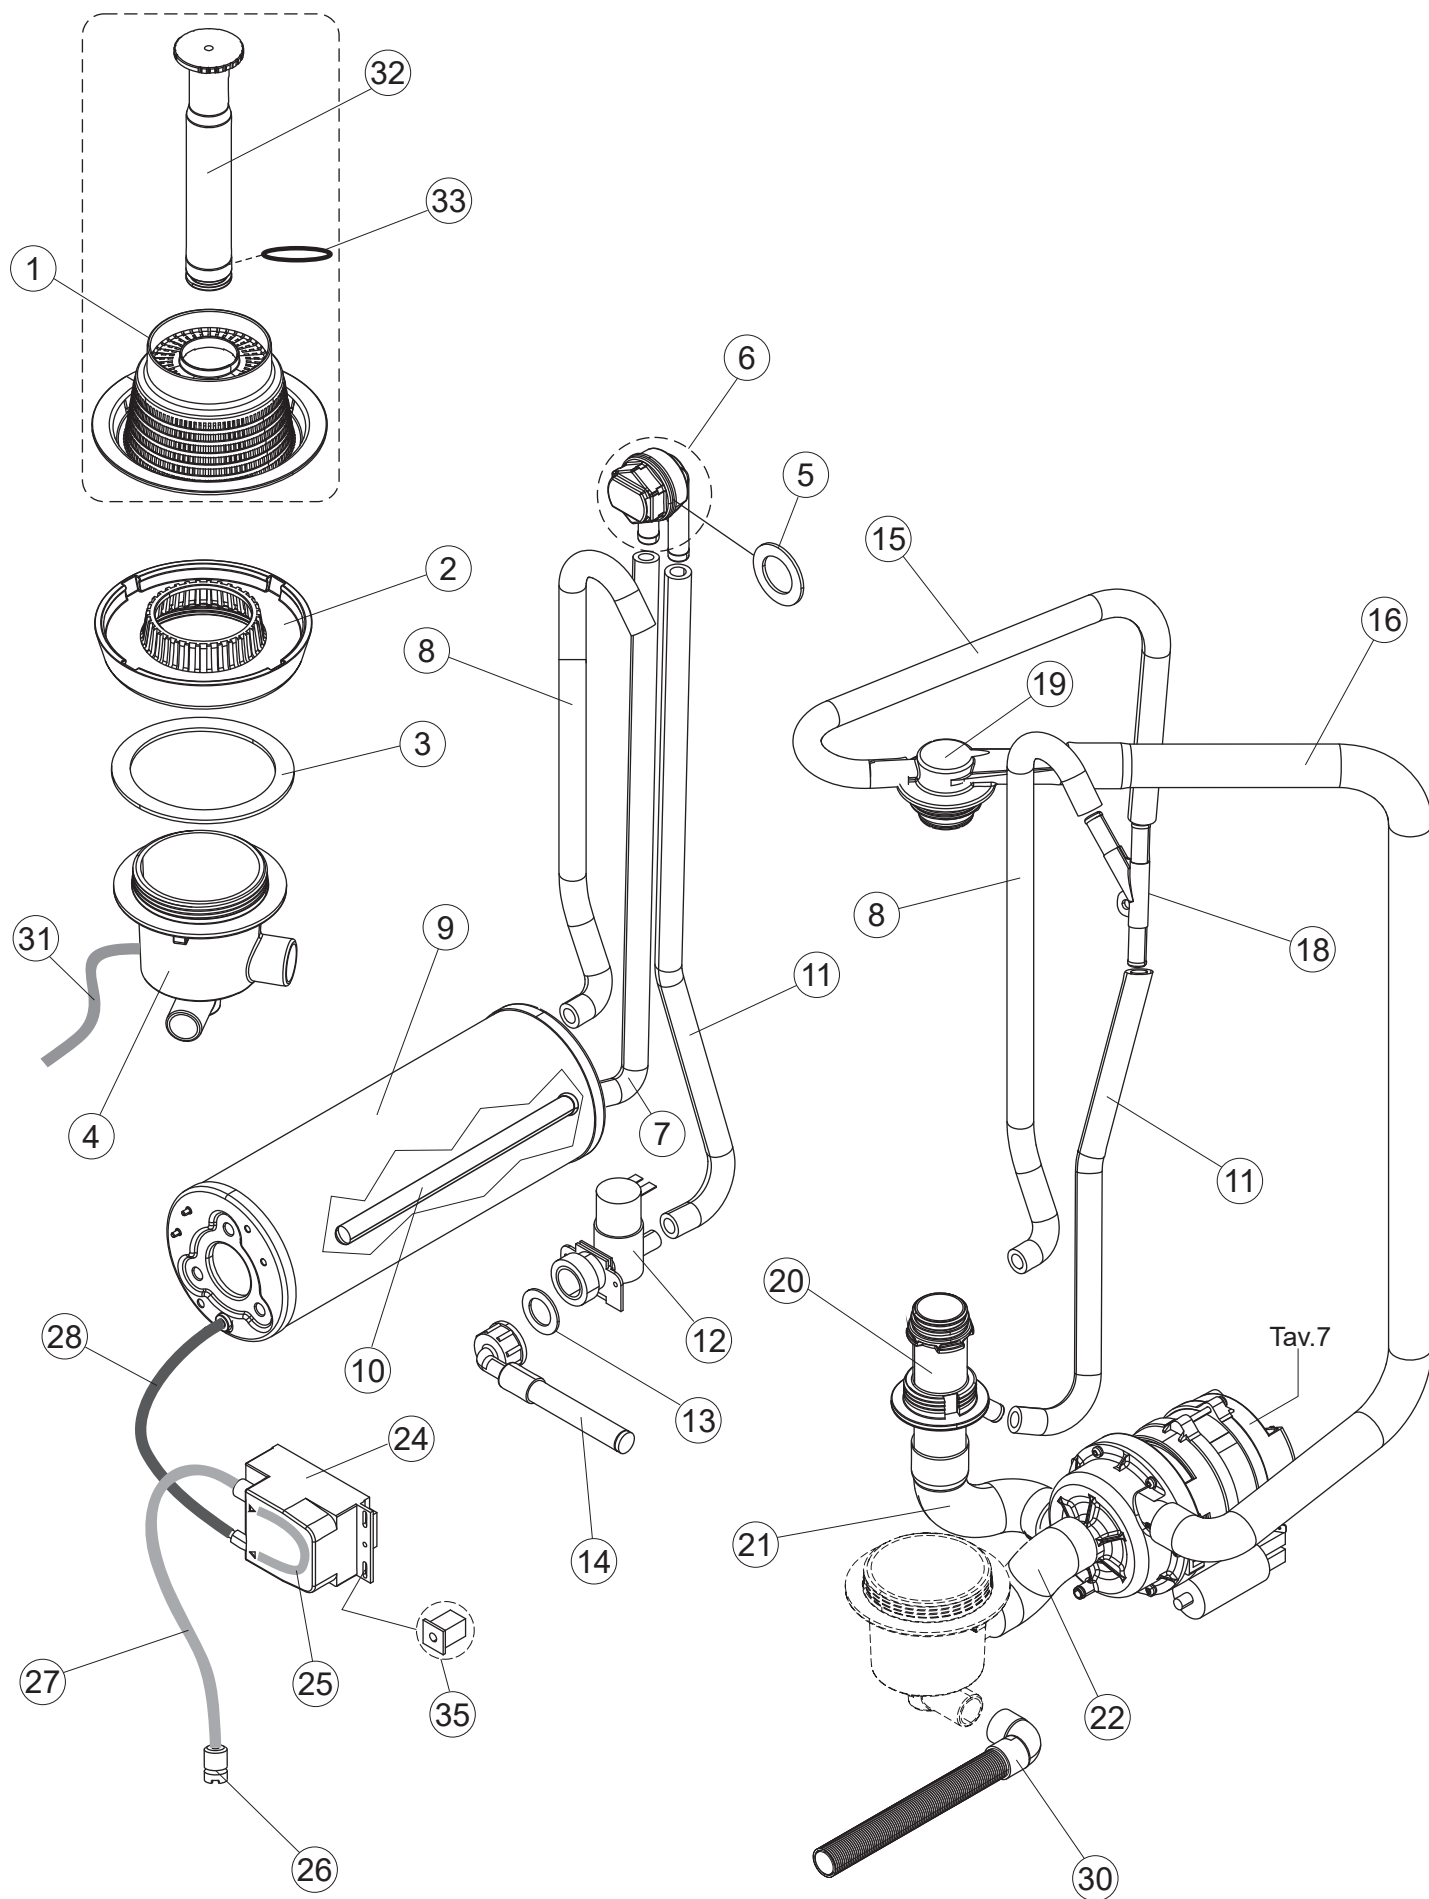

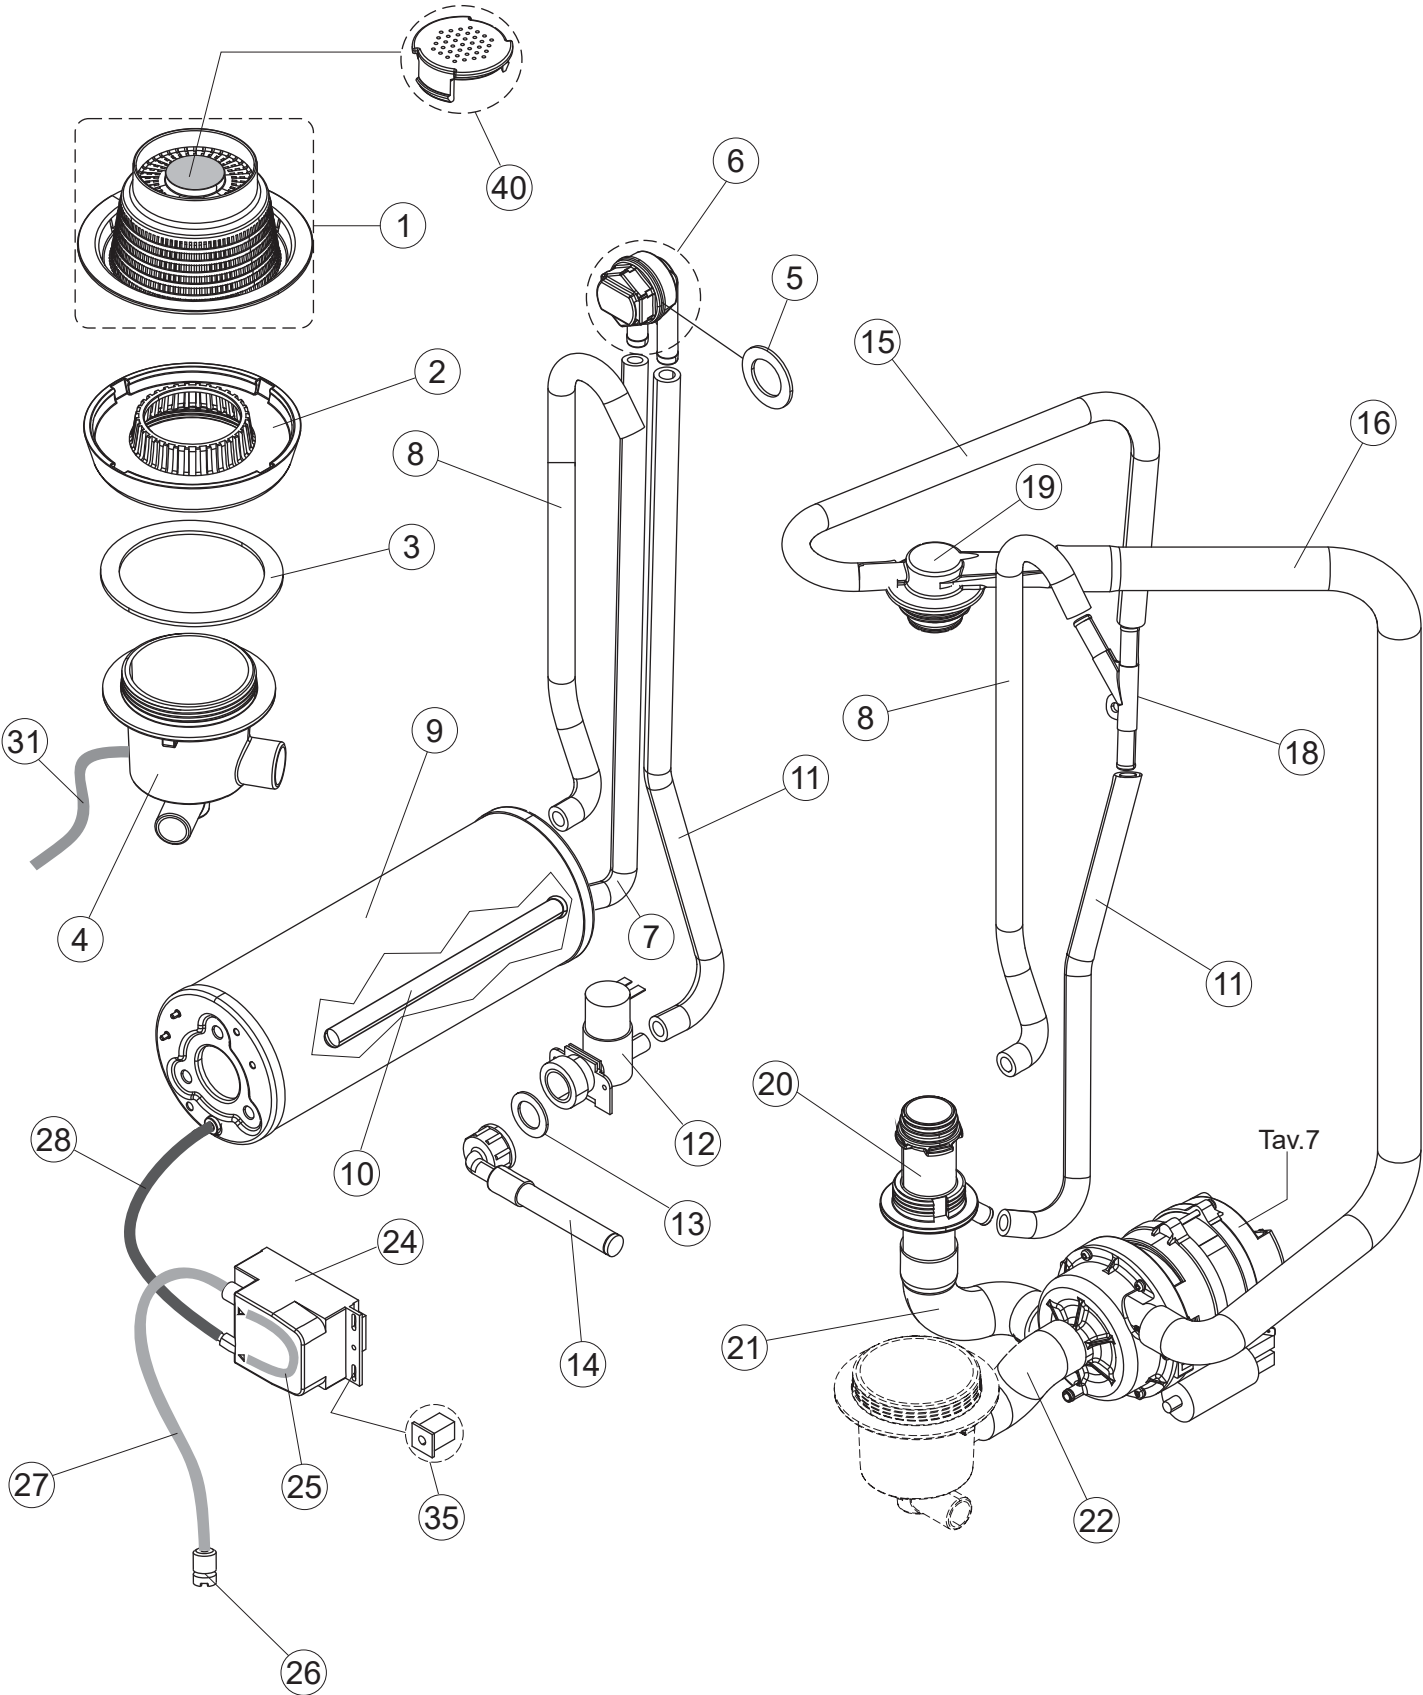

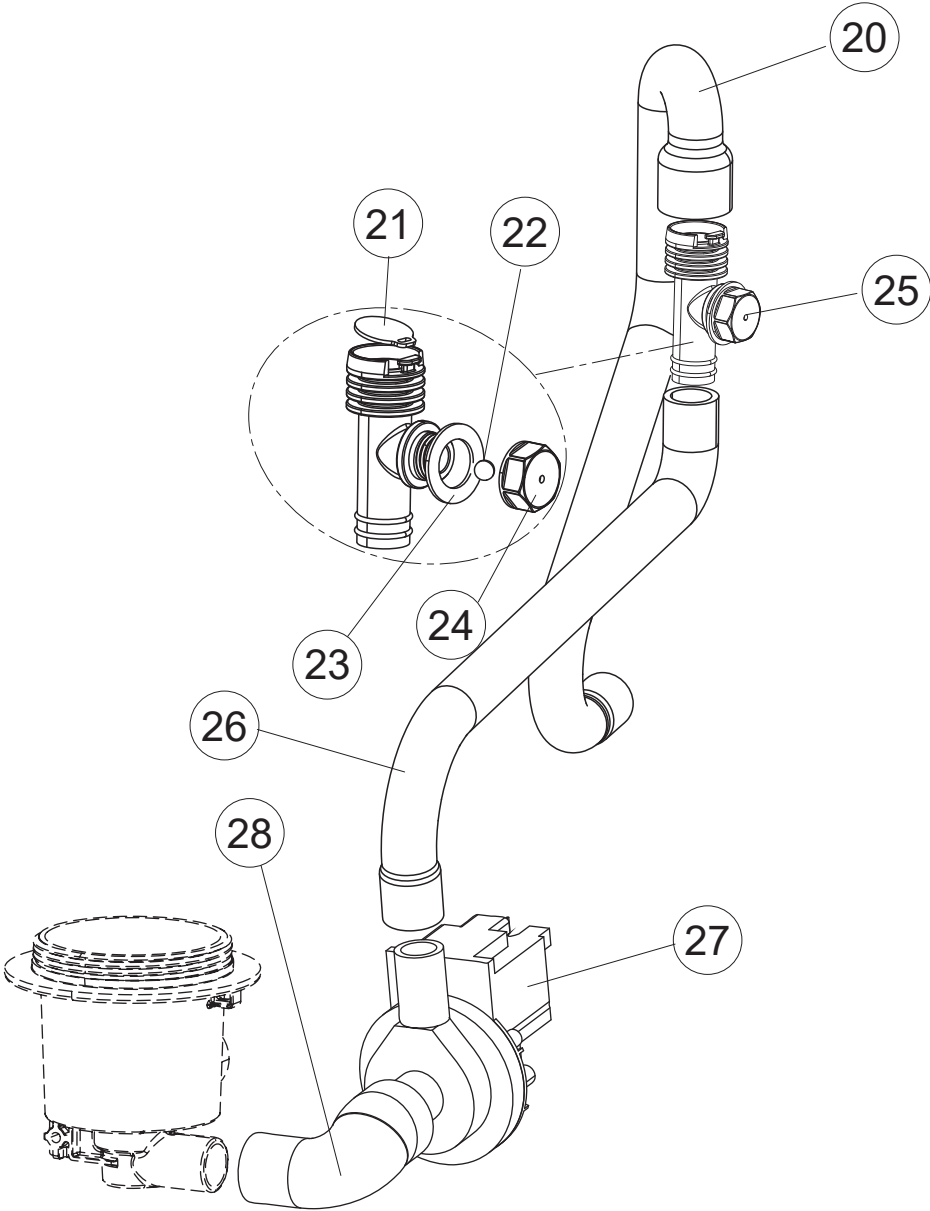

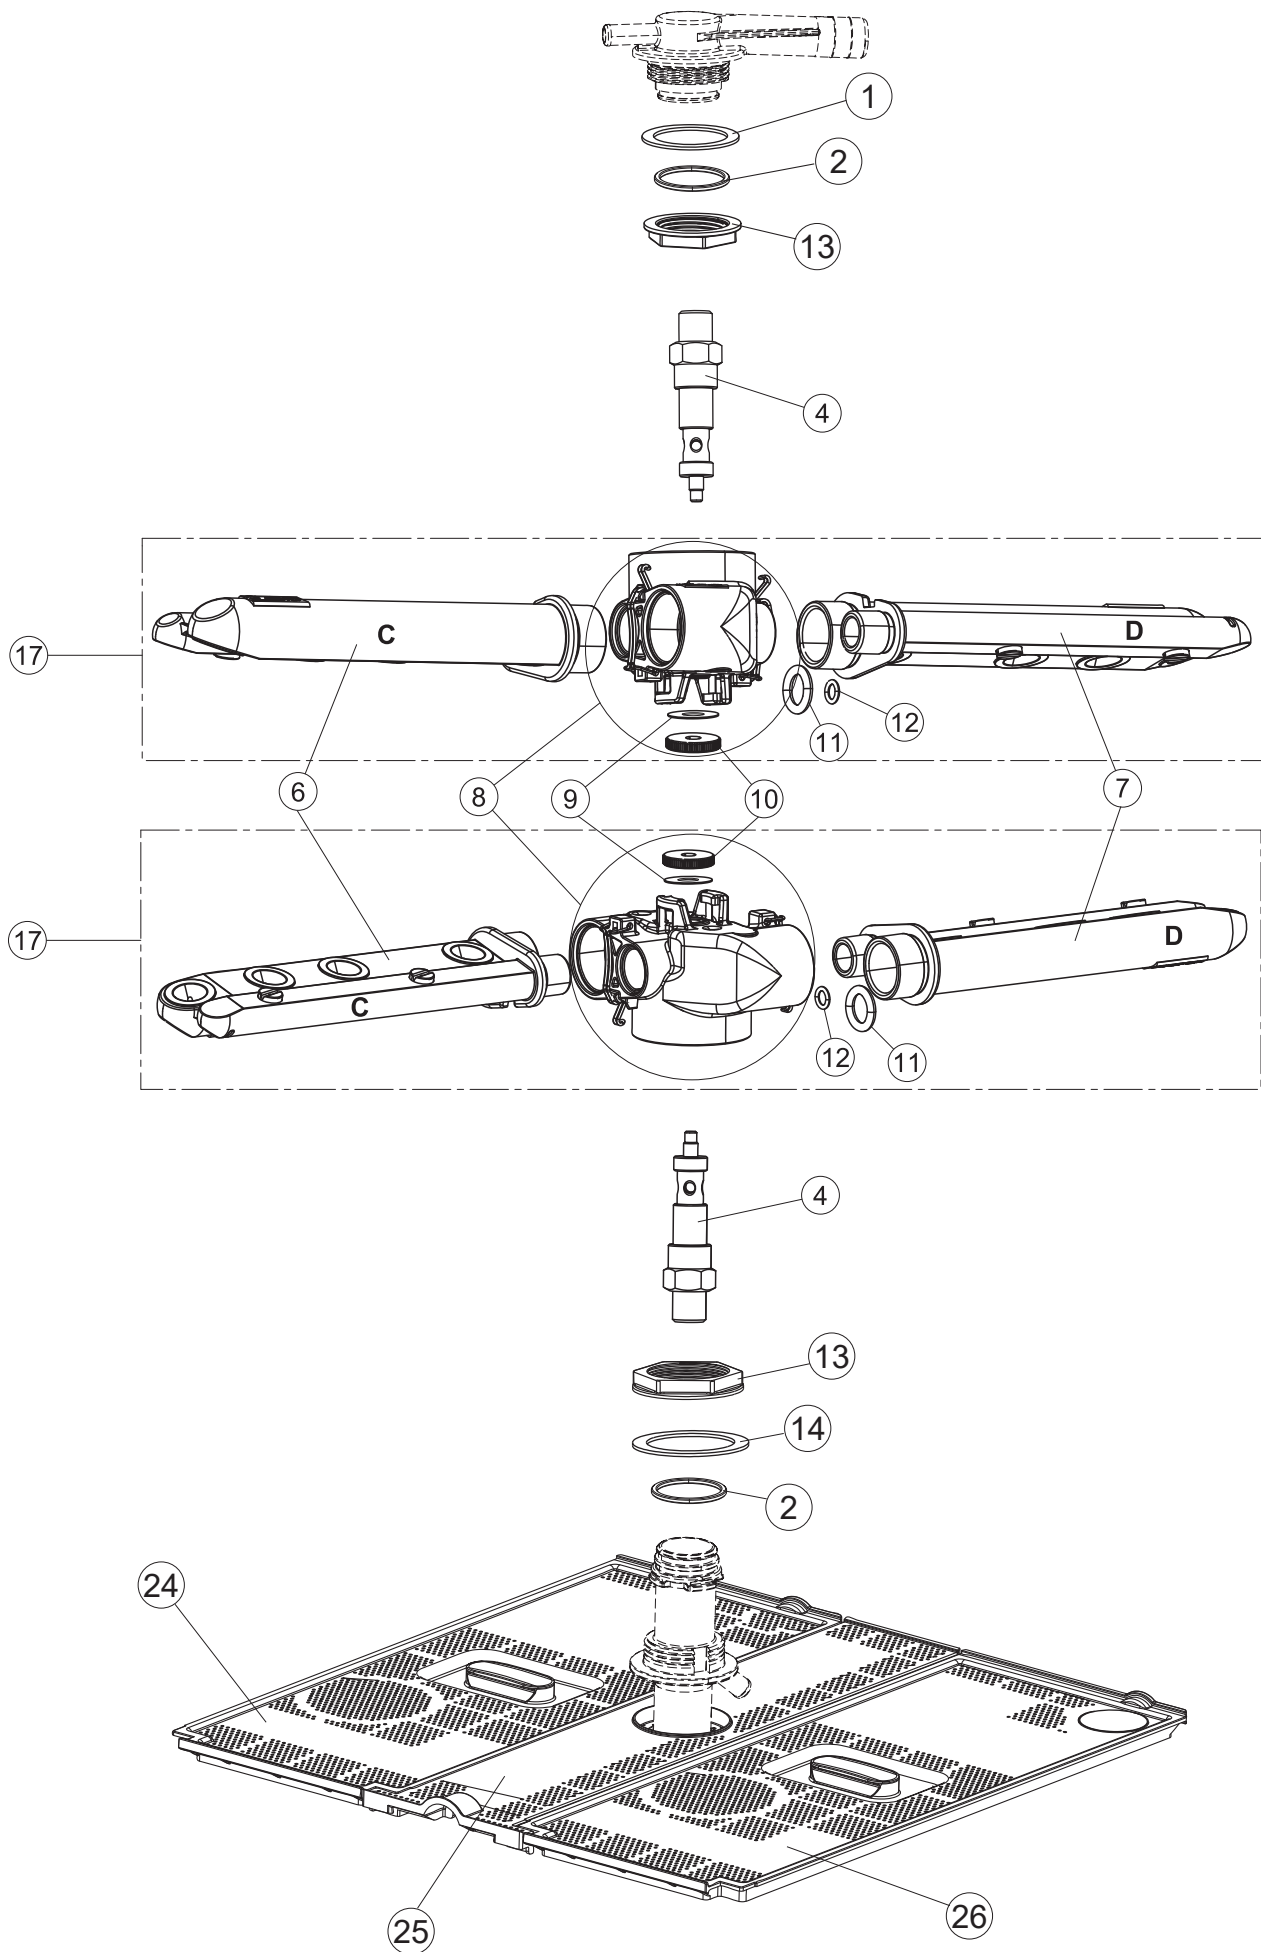

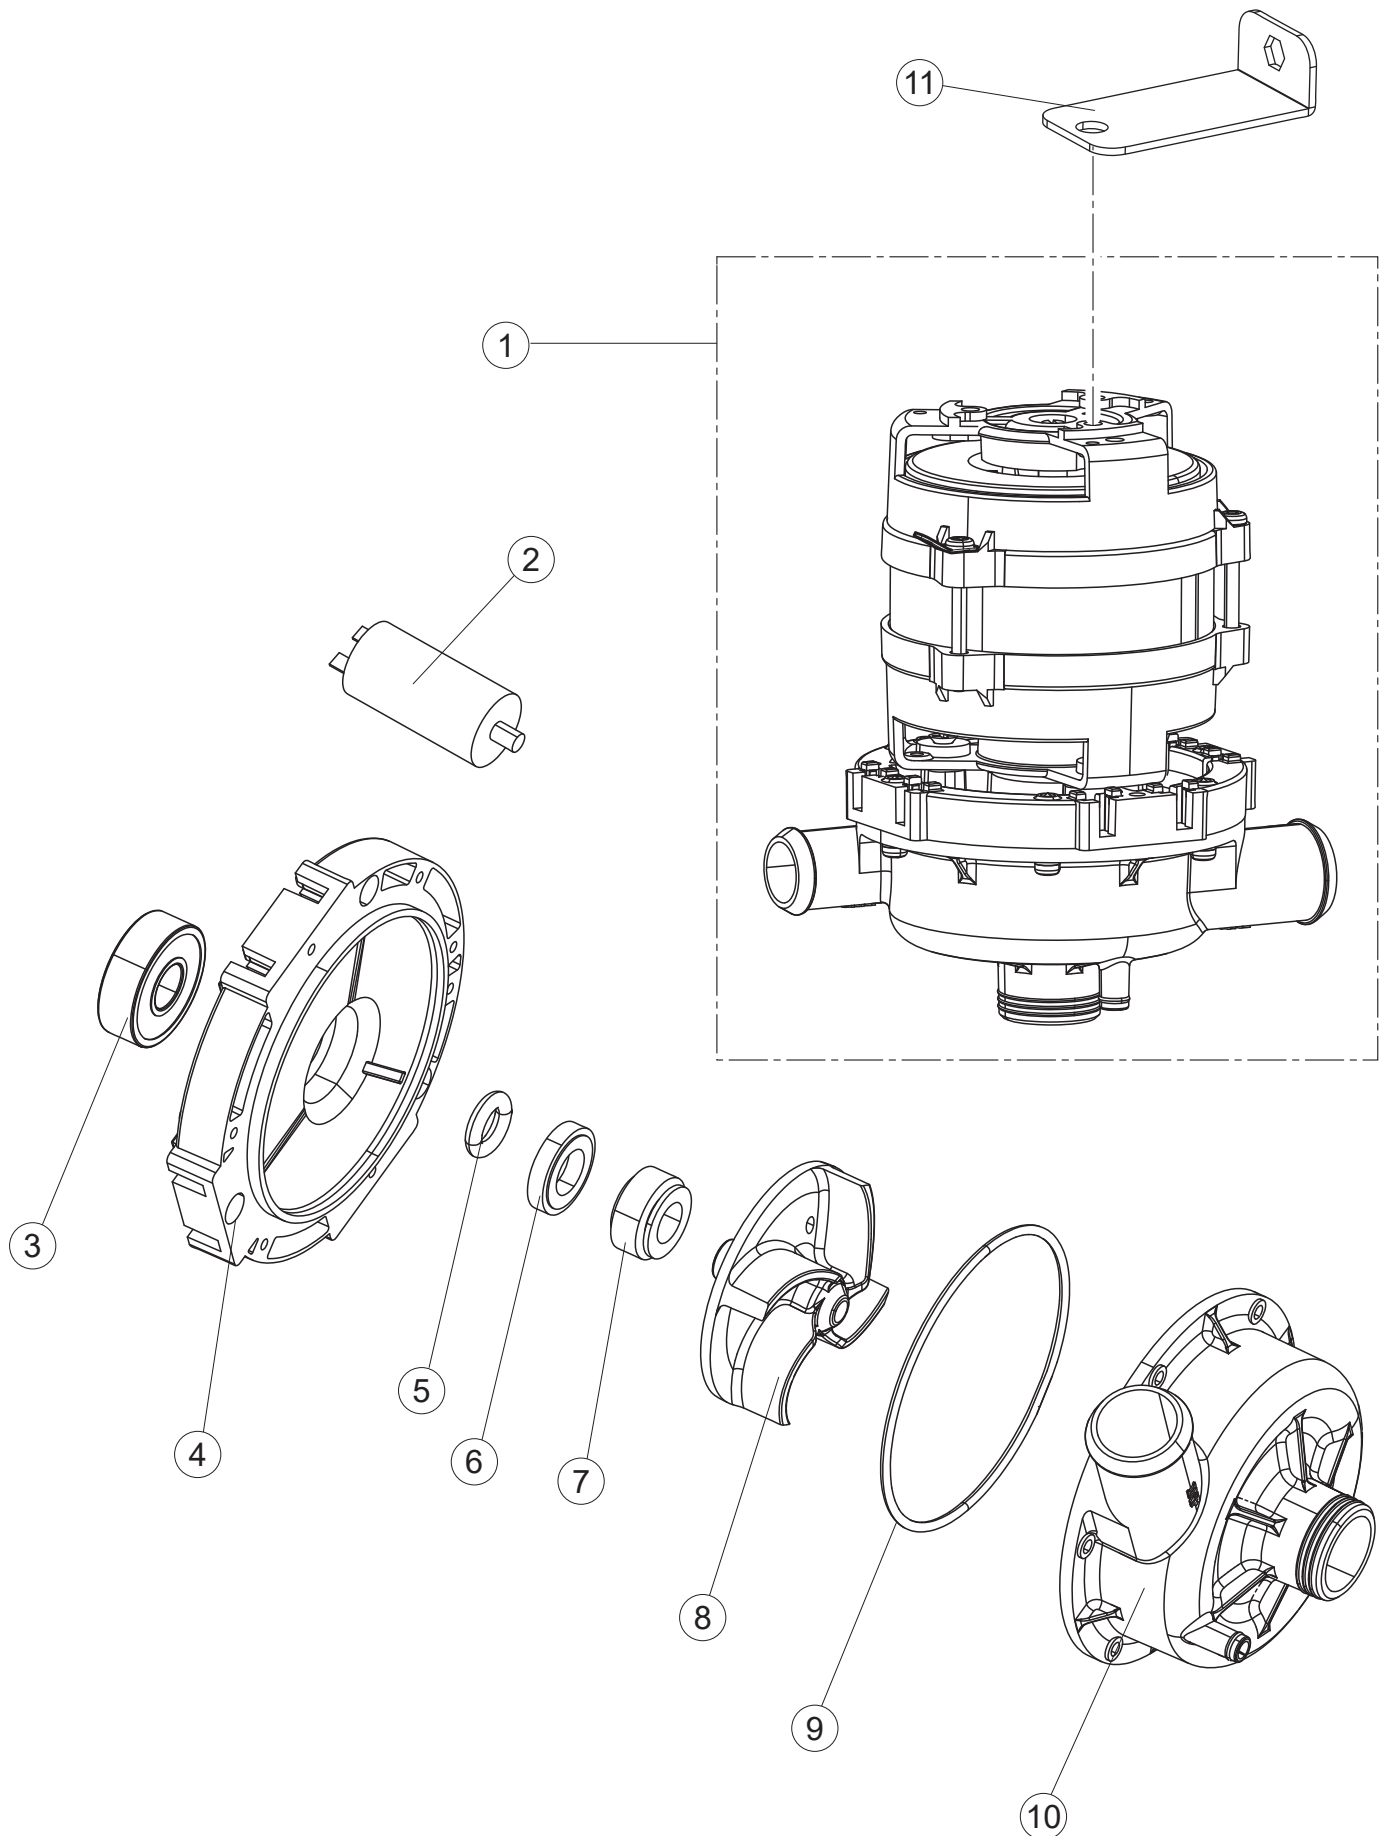

(*) Recommended spare part.

Page	Spare part position	Description	U.m.
1	1	COVER	NR
1	2	BACK PANNEL LA400	NR
1	3	ROD OF TOP DOOR-STOP BAR	NR
1	4	DOOR SHOULDER PLATE FOR GLASSWASHER	NR
1	5	RIGHT DOOR HINGE FOR GLASSWASHERS	NR
1	6	RIGHT DOOR HINGE FOR GLASSWASHERS	NR
1	7	PIVOT	NR
1	8	DOOR GASKET FOR GLASSWASHER	NR
1	9	DOOR LOCK SPRING FOR GLASSWASHERS	NR
1	10	DOOR LOCK FOR GLASSWASHERS	NR
1	11	DOOR	NR
1	12	PLUG	NR
1	13	BRACKET	NR
1	14	FRONT PANEL LA400	NR
1	15	HEXAGONAL FOOT FOR GLASSWASHER	NR
1	16	CHOCK D INT 9 EST 16	NR
1	17	BASE PROTECTION LA400	NR
1	20	CABLEHOSE	NR
1	25	PLUG	NR
1	27	PLUG	NR
1	29	RACK SLIDE DX.	NR
1	30	RACK SLIDE SX.	NR
2	1	CONTROL ADHESIVE INTERFACE ID 400 MAXIMA	NR
2	2	LAMP	NR
2	3	PUSH BUTTON CASE	NR
2	4	BUTTON	NR
2	6	PRESSURE SWITCH	NR
2	7	TERMINAL BLOCK	NR
2	8	PACKING FOR AIR TRAP OF PRESSURE SWITCH	NR
2	9	AIR TRAP FOR PRESSURE SWITCH	NR
2	10	PIPE	MT
2	11	O-RING	NR

(*) Recommended spare part.

Page	Spare part position	Description	U.m.
2	12	AIR TRAP CONNECTION OF PRESSURE SWITCH	NR
2	13	CABLE-RETAINER	NR
2	14	PLUG SCHUCKO 90- CABLE 1=2,5 MT	NR
2	15	HEATING ELEMENT 2100W 230V	NR
2	16	PACKING OF THE TANK RESISTANCE	NR
2	17	TRANSPARENT PROTECTION FOR ELECTRIC INSTALLATION FOR DISHWASHER	NR
2	18	SAFETY TANK THERMOSTAT 95C	NR
2	19	O-RING	NR
2	20	HEATING ELEMENT	NR
2	21	PROBE HOLDER	NR
2	22	TEMPERATURE PROBE	NR
2	23	THERMOSTAT 127	NR
2	24	DETERGENT TANK FITTING	NR
2	25	PIPE	MT
2	27	FILTER AID DISPENSER	NR
2	28	DETERGENT DOSING PUMP	NR
2	29	"SANTOPRENE" PIPE	NR
2	30	FIXING PLATE	NR
2	33	MAIN BOARD GET50.2	NR
2	34	DOUBLE SWITCH	NR
2	35	CYCLE PUSH-BUTTON - 2 CONTACTS	NR
2	36	FUSE	NR
2	37	FOOT BOARD SUPPORT	NR
2	38	TRANSP. SAFETY PLATE 44	NR
2	39	MAGNETIC DOOR SWITCH	NR
2	41	GROUP STOPPED TANK HEATER	NR
2	44	BLACK CAP	NR
2	52	PRESSURE SWITCH AIR BELL	NR
2	58	THERMOSTAT 90+/-3C	NR
3	1	STAINER	NR
3	2	RING NUT	NR
3	3	GASKET	NR

(*) Recommended spare part.

Page	Spare part position	Description	U.m.
3	4	ASPIRATION AND DRAIN BODY	NR
3	5	GASKET	NR
3	6	NO RETURN VALVE	NR
3	7	INLET BOILER PIPE LA400	NR
3	8	BOILER PIPE LA400	NR
3	9	BOILER	NR
3	10	PIPE	NR
3	11	PIPE	MT
3	12	FILL VALVE	NR
3	13	GASKET	NR
3	14	INLET WRAS PIPE	NR
3	15	SLEEVE	NR
3	16	DELIVERY WASH HOSE	NR
3	18	JUNCTION "Y"	NR
3	19	SUPPORT ARMS WASH / RINSE	NR
3	20	MAIN MANIFOLD	NR
3	21	DELIVERY WASH HOSE LA400	NR
3	22	SUCTION PIPE	NR
3	24	DOSING PUMP	NR
3	25	HOSE	NR
3	26	FILTER AID DISPENSER	NR
3	27	PIPE	MT
3	28	LINEN RUBBER PIPE 5X12 - BLACK	MT
3	30	DRAIN HOSE	NR
3	31	PIPE	MT
3	32	TROPPO PIENO LA400	NR
3	33	O-RING	NR
3	35	CLIPS	NR
4	1	STAINER	NR
4	2	RING NUT	NR
4	3	GASKET	NR
4	4	ASPIRATION AND DRAIN BODY	NR

(*) Recommended spare part.

Page	Spare part position	Description	U.m.
4	5	GASKET	NR
4	6	NO RETURN VALVE	NR
4	7	INLET BOILER PIPE LA400	NR
4	8	BOILER PIPE LA400	NR
4	9	BOILER	NR
4	10	PIPE	NR
4	11	PIPE	MT
4	12	FILL VALVE	NR
4	13	GASKET	NR
4	14	INLET WRAS PIPE	NR
4	15	SLEEVE	NR
4	16	DELIVERY WASH HOSE	NR
4	18	JUNCTION "Y"	NR
4	19	SUPPORT ARMS WASH / RINSE	NR
4	20	MAIN MANIFOLD	NR
4	21	DELIVERY WASH HOSE LA400	NR
4	22	SUCTION PIPE	NR
4	24	DOSING PUMP	NR
4	25	HOSE	NR
4	26	FILTER AID DISPENSER	NR
4	27	PIPE	MT
4	28	LINEN RUBBER PIPE 5X12 - BLACK	MT
4	31	PIPE	MT
4	35	CLIPS	NR
4	40	PLUG	NR
5	20	SLEEVE	NR
5	21	DIAPHRAGM VALVE VENT	NR
5	22	SPHERE	NR
5	23	GASKET	NR
5	24	PIPE FITTING	NR
5	25	NO RETURN VALVE	NR
5	26	SLEEVE	NR

(*) Recommended spare part.

Page	Spare part position	Description	U.m.
5	27	DRAIN PUMP (9010722)90220/240-50	NR
5	28	SLEEVE	NR
6	1	GASKET	NR
6	2	SEALING AND SLIDING RING CL.3	NR
6	4	PIVOT	NR
6	6	RINSE AND WASH ARM	NR
6	7	RINSE AND WASH ARM	NR
6	8	CORPETTO COMPLETO X PETTINI PAR.D40.6	NR
6	9	GASKET	NR
6	10	RING NUT	NR
6	11	O-RING	NR
6	12	O-RING	NR
6	13	RING NUT	NR
6	14	GASKET	NR
6	17	RINSE AND WASH ARMS	NR
6	24	STAINER	NR
6	25	STAINER	NR
6	26	STAINER	NR
7	1	WASHPUMP LA400 230/50-1N	NR
7	2	CAPACITOR 5MF	NR
7	3	WASH-PUMP BEARING	NR
7	4	PRICE TO BE DEFINED	
7	5	PRICE TO BE DEFINED	
7	6	WASHPUMP SHAFT SEAL	NR
7	7	WASHPUMP SHAFT SEAL	NR
7	8	ELECTROPUMP IMPELLER	NR
7	9	O-RING	NR
7	10	ELECTROPUMP HOUSING	NR
7	11	SUPPORT BRACKET	NR