


Exploded View of vegetable cutter 09300235

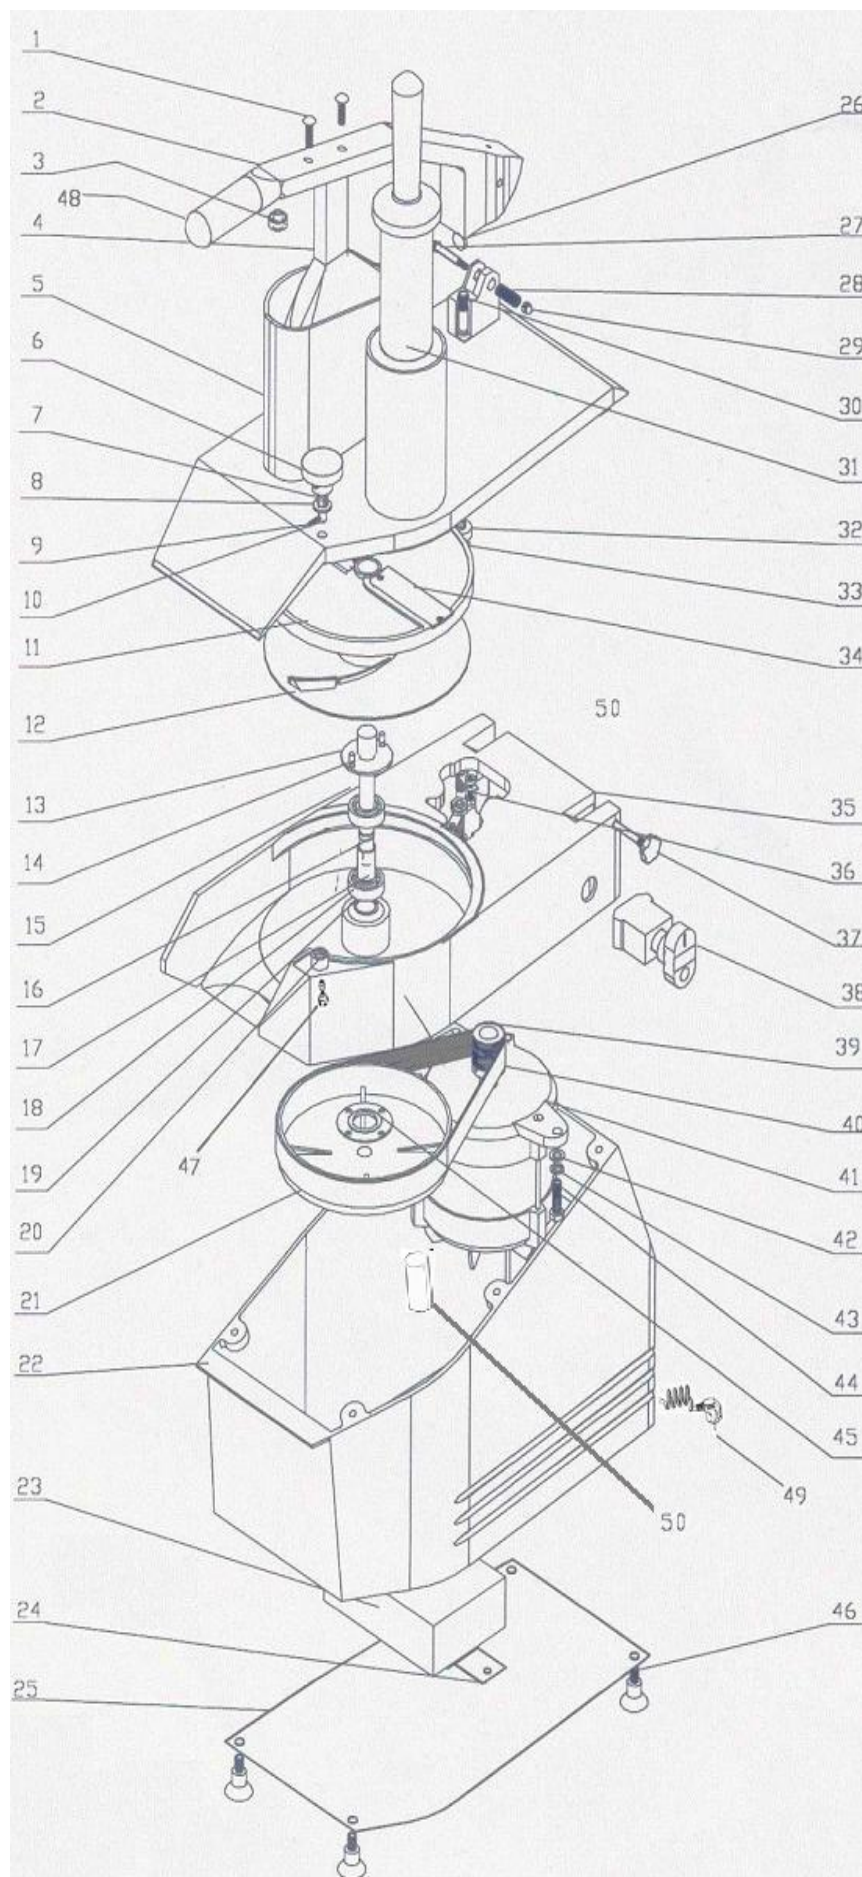

No.	Part Name	
300-001	Bolt	
300-002	Handlebar	
300-003	Nylon gasket	
300-004	Pressing piece	
300-005	Input body	
300-006	Anchor knob	
300-007	Spring	
300-008	Gasket	
300-009	Pin (cancelled)	
300-010	Anchor spindle	
300-011	Knife disc	Just show the knife location
300-012	Drain disc	
300-013	Anchor board	
300-014	Pin	
300-015	Oil envelope	
300-016	Central spindle	
300-017	Isolated sheath (cancelled)	
300-018	Bearing	
300-019	Block circle	
300-020	Anchor sheath	
300-021	Belt wheel	
300-022	Seat of body	
300-023	Electric box	
300-024	Bottom board of electric	
300-025	Bottom board of body	
300-026	Magnet	
300-027	Umbrella bolt	
300-028	Steel sheath	
300-029	Nut	
300-030	Adjusting bolt	
300-031	Plastic pressing stick	
300-032	Seat of magnet	
300-033	Magnetic steel	
300-034	Knife	
300-035	Body	
300-036	Microswitch	
300-037	Waved bolt	
300-038	Switch	
300-040	Belt	
300-041	Motor	
300-039	Strapped wheel	
300-042	Gasket	
300-043	Gasket	
300-044	Bolt	
300-045	Gear cover	
300-046	Feet	
300-047	Microswitch (cancel)	
300-048	Black bar	
300-049	Wire and plug	
300-050	Capacity	