


Electric Fryers 09300410-09300411

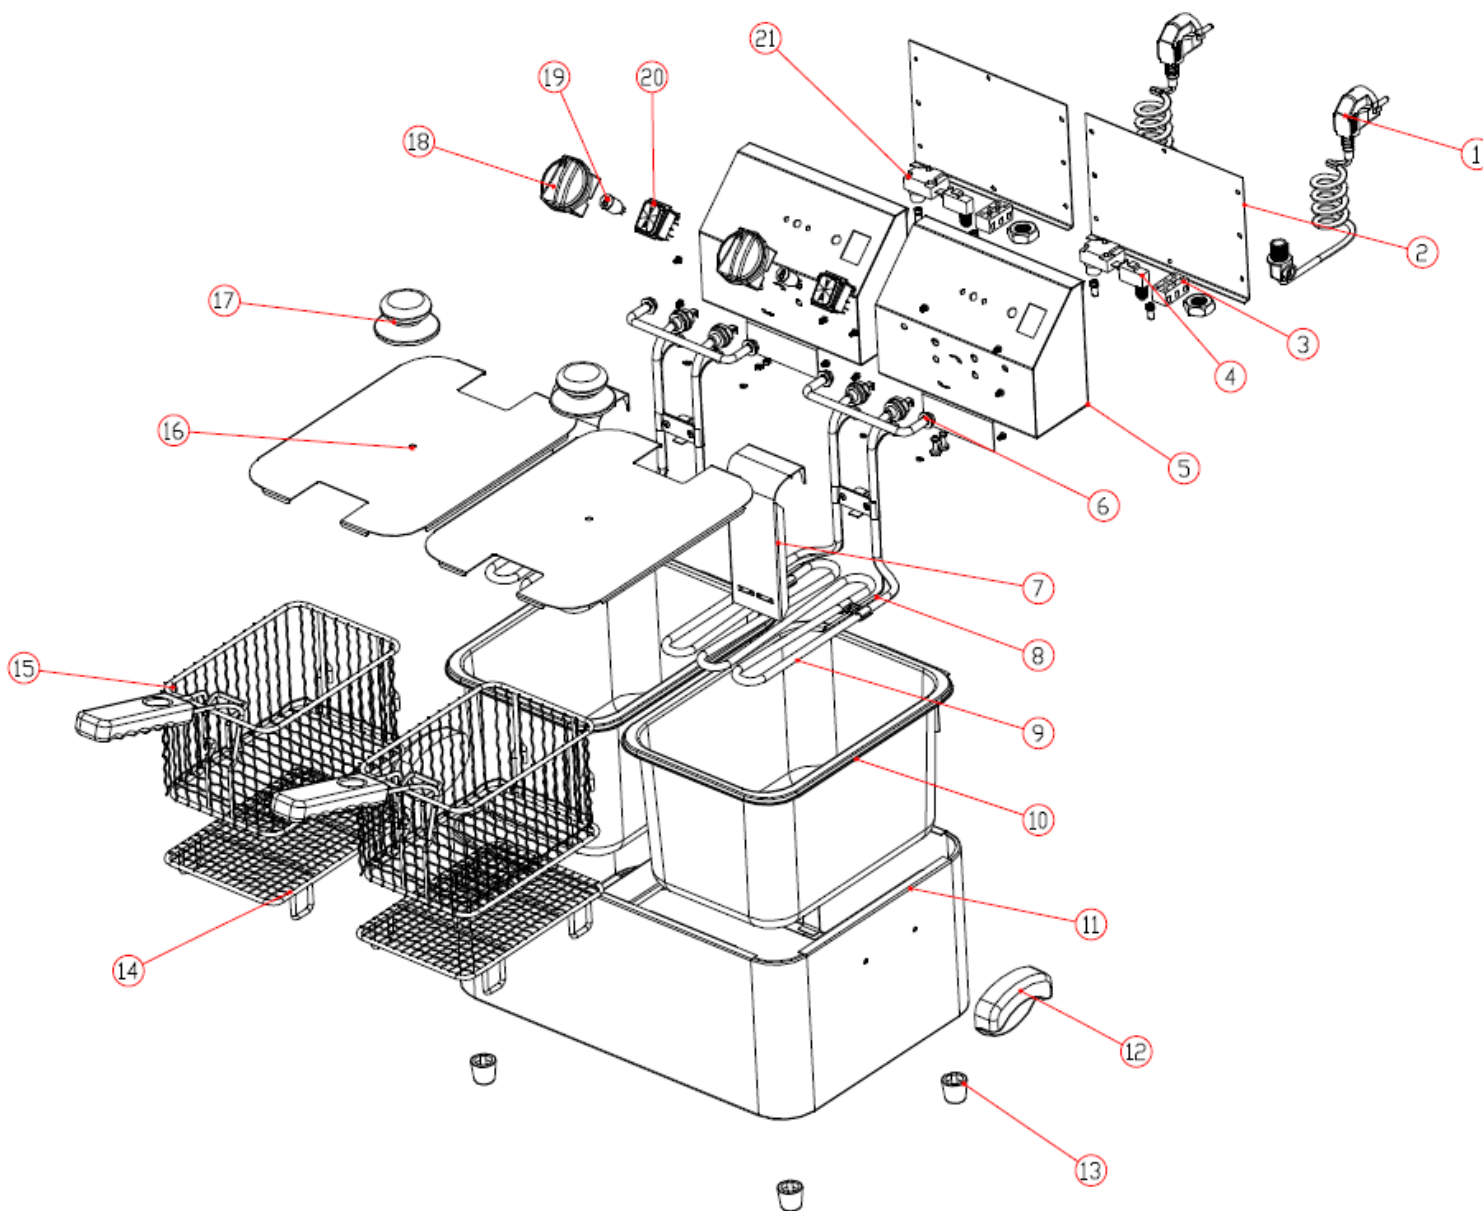

09300410-09300411

Part No.	Name	
1	Power line	
2	Cover of electric box	
3	connector	
4	Safety switch	
5	Electric box	
6	hanging	
7	Protect board	
9	Heating element	
10	Oil pot	
11	frame	
12	Handle of frame	
13	Rubber feet	
14	Layer of frying basket	
15	Frying basket	
16	Cover of oil pot	
17	Handle of cover	
18	thermostat	
19	Indicate light	
20	Mains switch	
8	Temperature probe	
21	Temperature limiter	