


Electric Fryer 09300416+09300415

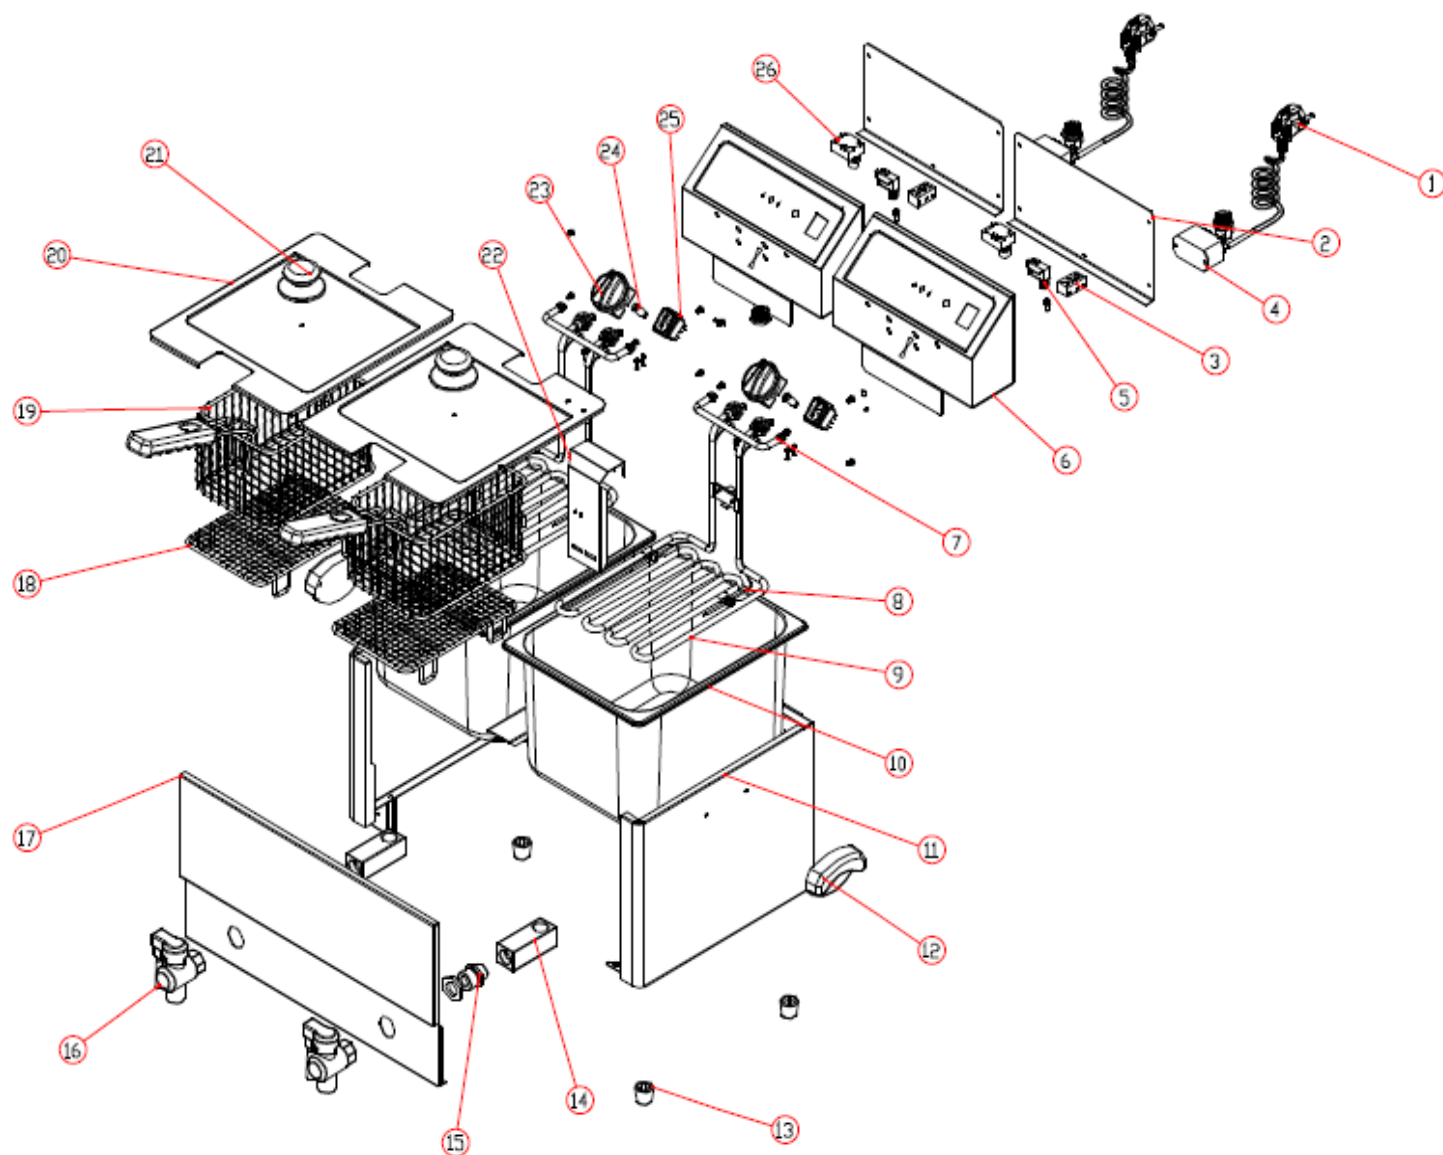

Part No.	Name	
1	Power line	
2	Cover of electric box	
3	connector	
4	relay	
5	Contact switch	
6	Electric box	
7	hanging	
9	Heating tube	
10	Oil pot	
11	frame	
12	Handle of frame	
13	feet	
14	Square tube	
15	connector lug	
16	Oil tape	
17	Face plate	
18	Layer of frying basket	
19	Frying basket	
20	Cover of oil pot	
21	Handle of cover	
22	Protect board	
23	thermostat	
24	Indicate light	
25	Mains switch	
26	Temperature limiter	
8	Temperature probe	