

NO	ITEM	QTY/PCS
1	Electric head back plate	1
2	Electric head	1
3	Heat Indicator	1
4	Timer Knob	1
5	Timer	1
6	Power switch	1
7	Micro switch	1
8	Temperature Limiter	1
9	Temperature Limiter Knob	1
10	Power Indicator	1
11	Thermostat Knob	1
12	Thermostat dial	1
13	Thermostat	1
14	Cable Lock	1
15	Power cord	1
16	MAX-MIN Level	1
17	Heater Fixed board	1
18	Heater	1
19	Heater	1
20	Rubber Feet	3
21	Oil Valve	4
22	Oil valve cap	1
23	oil filler plate	1
24	Heater cover	1
25	Cover	1
26	Cover handle	1
27	Fryer basket	1
28	Machine's body	1
29	Relay	1
30	Terminal	1
31	Handle of Electric head	2

