

MAXIMA

SOUP KETTLE

09300575 / 09306150 / 09306100



USER MANUAL



BEFORE USING THIS PRODUCT YOU SHOULD READ THIS USER MANUAL PROPERLY



Introduction

Thank you for purchasing this Maxima product. In order to obtain the maximum benefit and use of this product, please read these instructions completely before attempting to install or use this product.

Your new Maxima product is manufactured with advanced production techniques. Every product is inspected before shipment and tested to ensure operator safety and product quality. All parameters have reached or exceeded the national standard.

The Maxima soup kettle can be used to keep different kind of food products warm. They are a perfect solution for the storage of food products. The machines are safe, stable and easy-to-use. All parts in contact with food are made of stainless steel.

At Maxima we are very proud of our products and are completely committed to providing you with the best products and service possible. Your satisfaction is our number one priority.

We know you will enjoy using this product and Thank You for choosing our product. We hope you consider Maxima for your future equipment purchases.

Safety regulations

- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- This appliance may only be used for warm storage of food.
- Be careful not to burn yourself at the appliance.
- **Warning!** Do not touch other elements than the control buttons during the use of the appliance. Other parts and the water will become hot, while using the appliance.
- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician. **Not following these instructions could give rise to life-threatening situations.**
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not place the appliance on its side or upside down, also not while the appliance is being transported. Do not turn the appliance in an angle of more than 45°.
- Do not touch the plug with wet or damp hands.
- Regularly check the plug and cord for any damage. When the plug or cord is damaged, you should have it repaired by a certified repair company.




- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired by a certified repair company.
- Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Make sure that no one can accidentally pull the cord loose or trip over the cord.
- Always keep an eye on the appliance when in use.
- Never let children use appliances without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- **Warning!** As long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- Avoid overloading the appliance.
- Do not use any extra devices that are not supplied along with the appliance.
- The electrical installation must satisfy the applicable national and local regulations.

Preparations before using for the first time


- Check to make sure the appliance is undamaged. In case of any damage, contact your supplier immediately and do **NOT** use the appliance.
- Remove all the packing material.
- Place the appliance in the middle of a steady place and level the appliance.
- Make sure the appliance is not placed next to any sources that radiate heat (for example a heater, stove or oven).
- Make sure the appliance is placed 10 cm from every other object or walls.
- Position the appliance in such a way that the plug is accessible at all times.
- Clean the accessories and the appliance with luke-warm water and a soft cloth.
- Follow the steps in chapter 'Operation'.

Operation

09300575 / 09306100

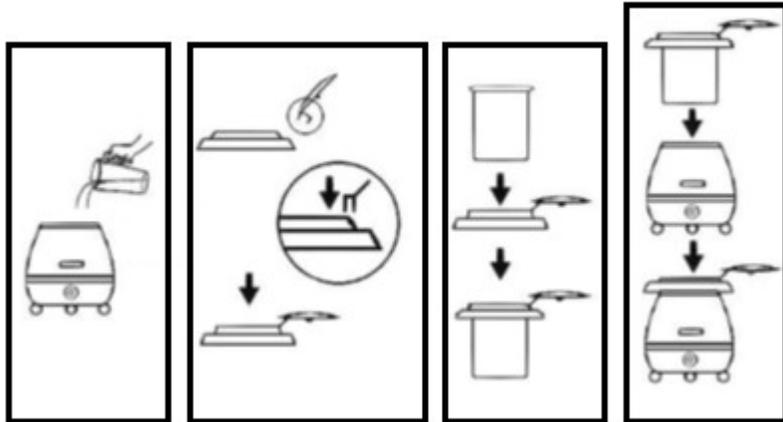

09306150

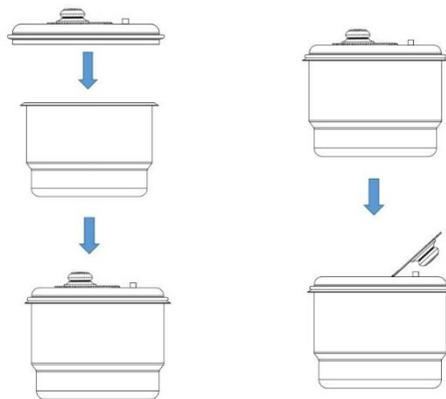

- Fill the soup kettle with water till the maximum line that is drawn inside the basic frame. (step 1)
- **Warning!** When there is too much water in the basic frame, remove this before continuing.
- **Warning!** Make sure the water level does not go below the minimum while using the appliance. Control this regularly when you use the appliance.
- Plug the appliance into the main socket.
- **Warning!** Fill the basic frame first with water, before you plug the appliance into the main socket.
- Use the temperature switch to achieve the desired temperature. The indicator will start burning. When the desired temperature is reached the indicator will switch off.
- **Warning!** Never move the appliance during use.



- **Warning!** When the soup kettle is working, we advise you to not use your bare hands to remove anything. Use covering material when you remove the cover from the soup kettle.
- **Warning!** When food is spilled on the appliance, it should be cleaned immediately; otherwise it may cause damage to the components.
- When the appliance is not being used, turn off the appliance by turning the temperature switch back to zero.
- Fill the inner kettle with the desired food and place it as in the above picture into the basic frame. (step 3 and step 4)
- **Warning!** Do not let the appliance work unattended for the long term (over night or similar)
- **Warning!** Do not place another small kettle or pan into the appliance.
- When the appliance will not be used for a longer period, please remove the plug from the main socket.
- When you are finished with the appliance, make sure it is cleaned according to the steps in chapter 'Cleaning and maintenance'.

Cleaning and maintenance

- Always remove the plug from the socket before any cleaning or maintenance is being done to the appliance.
- **Warning!** Let the appliance, and the water inside, cool down before any cleaning or maintenance is being done to the appliance.
- **Warning!** Do not use any aggressive detergents or scourers, which may cause scratches. Do not use gasoline containing or solvents while cleaning. Make sure no water enters the appliance.
- **Warning!** Never immerse the appliance in water or any other liquid!
- Remove the kettle out of the soup kettle and let the water cool down. When the water is cooled down completely it can be carefully poured out of the soup kettle.
- Clean the accessories and the appliance with a damp cloth (water with mild detergent). Dry the appliance totally by making use of a dry towel.
- Clean the kettle and cover with soap (water with mild detergent)
- With regular use calcification can occur; this can be removed by the use of vinegar or special decalcification products.



Specifications

Model	09300575	09306150	09306100
Power	230 V ~ 50 Hz	230 V ~ 50 Hz	230 V ~ 50 Hz
Connected load	400 Watt	650W	435W
Capacity:	10 L	13L	10L
Dimensions:	Ø390 x H350	Ø390 x H350	Ø370 x H360
Weight	Approx 4.65 Kg	Approx 5.7 Kg	Approx 4.8 Kg
Casing	Powder Coated Steel	Powder Coated Steel	Stainless Steel
Kettle	Stainless Steel	Stainless Steel	Stainless Steel

Storage

- Make sure the appliance is cleaned the right way before it is being stored.
- Coil the power cord and put it away.
- Store in a cool and dry place.



Guarantee

Thank you for using our products, our company will follow related provisions from our "Algemene Voorwaarden", and provide you services when you can show us the invoice.

We offer a 24-month warranty for invoice dates from 01-10-2025. Invoice dates before 01-10-2025 will have a 12-month warranty. In the warranty period, our company is responsible for free parts if there is a device fault or quality problem of spare parts under correct operation.

The following does not belong to free services:

1. Damages result from transportation, installation, improper connections.
2. Component damages caused by failing to provide power and voltage as required in technical data.
3. Damages caused by disassembling products, adjust or change the mechanical and electrical structures without permission.
4. Damages caused by improper operation, cleaning and maintenance.
5. Non-man-made damage, such as damages from abnormal voltage, fire, building collapse, lightning, floods and other natural disasters, and damages from rats and other pests.
6. Failure in following the manual when operating.
7. Wearable and expendable parts.
8. Altered invoice or without invoice.

Discarding

- When discarding the appliance at the end of its useful life, please observe the regulations and guidelines in force at that time.