



CAN OPENER

09368600



Please read and keep
these instructions



Bewaar deze handleiding bij het apparaat
Keep these instructions with the appliance
Diese Gebrauchsanweisung bitte beim Gerät aufbewahren
Gardez ces instructions avec cet appareil
Zachowaj instrukcję urządzenia
Păstrați manualul de utilizare alături de aparat


Alleen voor gebruik binnenshuis
For indoor use only
Nur zur Verwendung im Innenbereich
Pour l'usage à l'intérieur seulement
Do użytku wewnątrz pomieszczeń
Numai pentru uz casnic

GEbruikSAANWIJZING
USER INSTRUCTIONS
GEBRAUCHSANWEISUNG
MODE D'EMPLOI
INSTRUKCJA OBSŁUGI
MANUAL DE UTILIZARE



Gebruik / Operation / Gebrauch / Utilisation /
Użytkowanie / Mode de folosire



Onderdelen vervangen - wiel / Spare part replacement - wheel / Ersatzteile ersetzen-Rad/ Replacer des pièces de rechange- roue / Wymiana części - koło zębate / înlocuire piese schimb - roată zimțată

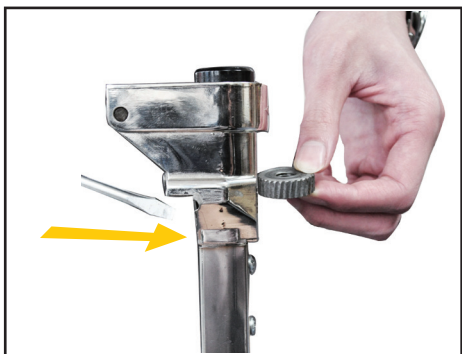

Onderdelen vervangen - mes / Spare part replacement - blade / Ersatzteile ersetzen- Messer / Replacer des pièces de rechange- lame / Wymiana części - ostrze / înlocuire piese schimb - lamă

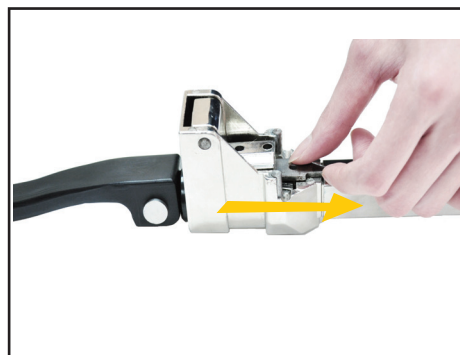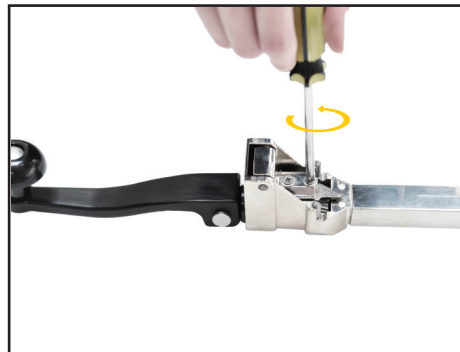

Nijverheidsweg 23A
3641 RP Mijdrecht
Nederland

+31 (0) 297 253 969
info@maxima.com
www.maxima.com

Wijzigingen en drukfouten voorbehouden
Changes, printing and typesetting errors reserved
Änderungen und Druckfehler vorbehalten
Variations et fautes d'impression réservés
Producent zastrzega sobie prawo do zmian oraz błędów drukarskich w instrukcji
Drepturi rezervate cu privire la modificări și greșeli de imprimare