 




MAXIMA

INDUCTION COOKER

09371125

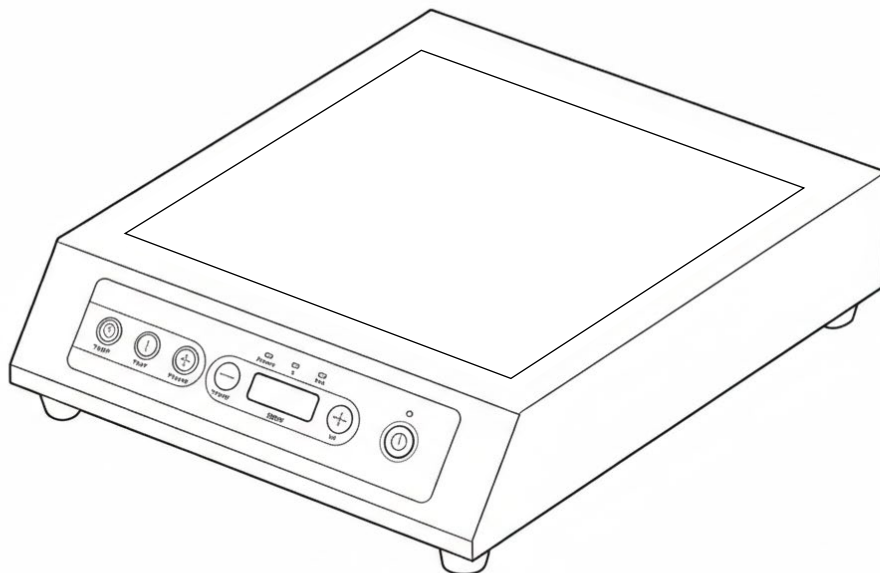

USER MANUAL

BEFORE USING THIS PRODUCT YOU SHOULD READ THIS USER MANUAL PROPERLY



1. Specification

- 1). Item No.: 09371125
- 2). Power: 500W - 3500W
- 3). Voltage: 230V~ 50Hz
- 4). Temperature: 60°-240°

2. Importance

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate since they can get hot.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit.
The paper may get burnt.
- 14). If the surface is cracked, switch off to avoid the possibility of electric shock and then take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unit near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.
- 19).  CAUTION: Hot surface.
- 20). This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 21). The temperature of accessible surfaces may be high when the appliance is operating.
- 22). Aluminium foil and plastic vessels not placed on hot surfaces.
- 23). The glass ceramic surfaces are not to be used for storage.
- 24). Metallic objects such as kitchen utensils, cutlery etc. shall not be placed on the hob surface



- within the cooking zones since they could get hot;
- 25). Take care when operating the appliance, as rings, watches and similar objects worn by the user could get hot when in close proximity to the hob surface
 - 26). Only use vessels of the type and size recommended.
 - 27). After use, switch the hob element off by means of its control.
Do not rely on the pan detector.
 - 28). Appliance not to be cleaned with water jet;
 - 29). Any repairs shall be carried out only by persons trained or recommended by the manufacturer.
 - 30). Care be taken to ensure that the splashback and surrounding area free of metallic surfaces
 - 31).  Non-ionizing electromagnetic radiation
 - 32). Appliance is not intended to be operated by means of an external timer or separate remote-control system.

Warning: Children should be supervised to ensure that they do not play with the appliance.

3. How to Use



- 1). Please put suitable cookware onto the plate of induction cooker, and connect the plug to suitable socket. After connected, the light of ON/OFF will shine, indicating that the power is connected normally.
- 2). Pressing ON/OFF, the light of Power  will shine, indicating that the induction cooker is entering the state of heating; the default power level of heating is 2000W. Adjust the power from level 500-3500 by pressing " DOWN" or " UP "
- 3). Pressing  button, the light of Temp  will shine, indicating the induction cooker is entering the state of temperature, the default temperature is 100°C, Adjust the temperature from 60°C to 240°C by pressing " DOWN" or " UP "
- 4). Adjust the time from 0 minute to 180 minutes by pressing " DOWN" or " UP " at the state of Timer.
- 5). When pressing ON/OFF during the working state, the induction cooker will stop working immediately. After stopping working, the fan will cool down the induction cooker for one minute, and then will be switch off.
- 6). The induction cooker will shut off automatically if there is no any operation within 2 hours if Timer is not set above 120 minutes.

 


- 7). The temperature of accessible surfaces may be high when the appliance is operating. The appliance is equipped with an overheat protection. If the pot or pan is getting too hot, the appliance will switch off power, a buzzer sounds and on the display occurs "E2" or "E02". Should this happen, wait for some minutes and cool the appliance down. After that, the appliance works without problems.
- If meat or vegetables should be roasted, please use the temperature function to avoid any over heating.

4. Usable and Non-usable Utensils


1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 30cm.

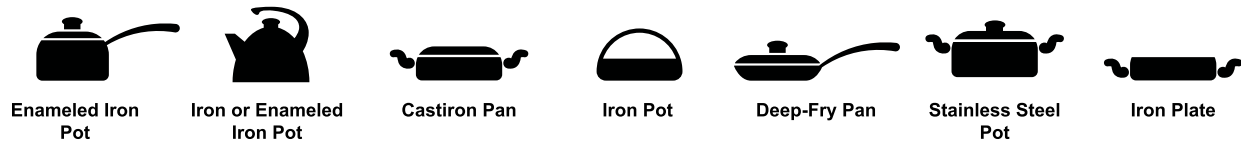

2). Non-usable Pans

 Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

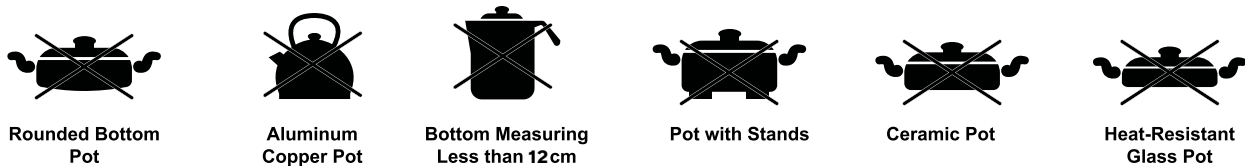

5. How to Clean

- 1). Unplug and wait until the cooker is cooled down completely. Clean the cooker after using each time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).



6. Trouble shooting

If there are any disruptions in the device operation and the display will show an error code check with the table below if the problem can be solved before you contact the customer service or supplier.

Error Message	Cause	Solution
E0	No pan on the hob or not suitable cookware	Place the appropriate cookware with food on the hob
E1	Internal temperature of the appliance is too high or the fan inside is not working	Made sure there is a minimum distance of 10cm between the ventilation slot and any obstruction such as a wall or other appliances. Unplug, let the appliance cool down, plug back in and switch ON the appliance Check and clean the air inlet and outlet if they are blocked
E2	1) Overheating protection 2) Damage of temperature sensor(working for about 1 minutes then display E2)	1) Remove the cookware from the appliance. Let the appliance cool down 2) Contact retailer.
E3	Protection of over-low or over-high voltage, or impact current	Make sure the appliance is connected to the correct input voltage

If you cannot remove the malfunctions:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
 - type of malfunction;
 - article and serial number (rating plate at the rear of the device);
 - date of purchase