



## Induction Wok User Manual



**09371300; 09371350**

**(380-420V 3N~ 50-60Hz 5000W)**

## I .Specification

Product description	Model No	Voltage & Power	Size( mm )
Induction wok	09371300	380-420V 3N~ 50-60Hz,5000W	400X700X870
	09371350	380-420V 3N~ 50-60Hz,5000W	400X700X311

## II .Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use it if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate since they can get hot.
- 11). Use the unit with sufficient space around it. Keep the front side and either the right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch it off to avoid the possibility of an electric shock and then take it to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unit near to the objects which are affected by magnets, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.



- 19) CAUTION: Hot surface.


20) This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- 21) The temperature of accessible surfaces may be high when the appliance is operating.
  - 22) Aluminum foil and plastic vessels are not placed on hot surfaces.
  - 23) the glass-ceramic surfaces are not to be used for storage.
  - 24) metallic objects such as kitchen utensils, cutlery etc. shall not be placed on the hob surface within the cooking zones since they could get hot.
  - 25) Take care when operating the appliance, as rings, watches and similar objects worn by the user could get hot when near the hob surface
  - 26) only use vessels of the type and size recommended.
  - 27) After using it, switch the hob element off by means of its control. Do not rely on the pan detector.
  - 28) appliance not to be cleaned with water jet.
  - 29) any repairs shall be carried out only by people trained or recommended by the manufacturer.
  - 30) care be taken to ensure that the splash back and surrounding area free of metallic surfaces
  - 31)  Dangerous voltage, be careful about the high voltage
  - 32)  non-ionizing electromagnetic radiation
  - 33) Appliance is not intended to be operated by means of an external timer or separate remote-control system.
  - 34) Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules
- Warning:** Children should be supervised to ensure that they do not play with the appliance.

#### Power line connection

When installation, please use special electricity air protection switch, and the switch must be installed in a convenient or easy controlled place, and the installation place should reach a height from 1.3M to 1.5M .The required electricity current of the switch is 63A.

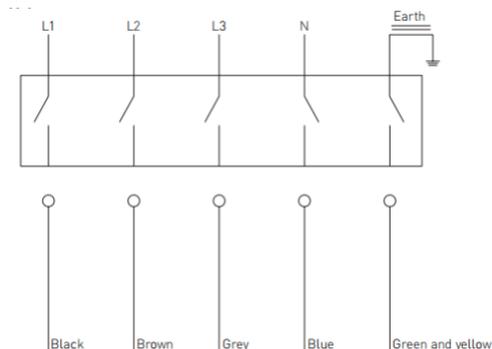

### III. How to Use

Models: 09371300

09371350



#### Steps:

1). Please put suitable cookware onto the plate of induction cooker and connect the cable correctly.

2). When the engraved marker on the position , means the induction cooker is power off.  
power and temperature can be adjusted by knobs.

3). Pressing  button you can change the working state between temperature and power. The light related will shine. You can adjust the temperature from 60°C up to 240°C or power from 1 level to 10 level by turning the knob.

4). When the engraved marker turns on the position  during the working state, the induction cooker will stop working immediately.

5). The induction cooker will shut off automatically if there is not any operation within 4 hours.

6). The temperature of accessible surfaces may be high when the appliance is operating  
The appliance is equipped with overheating protection. If the pot or pan is getting too hot, the appliance will switch off power, a buzzer sounds and, on the display, occurs "E2" or "E02". Should this happen, wait for some minutes and cool the appliance down. After that, the appliance works without problems.

If meat or vegetables should the roasted, please use the temperature function to avoid any overheating.

7). This induction cooker is usable for the below rounded bottom wok pan, which material is stainless steel, for other pans, we do not recommend using.



#### .IV. Error code

If there are any disruptions in the device operation and the display will show an error code check with the table below to see if the problem, can be solved before you contact the customer service or supplier.

Error Message	Cause	Solution
E0	No pan on the hob or not suitable cookware	Place the appropriate cookware with food on the hob
E1 or E01	Internal temperature of the appliance is too high or the fan inside is not working	Make sure there is a minimum distance of 10cm between the ventilation slot and any obstruction such as a wall or other appliances. Unplug, let the appliance cool down, plug back in and switch ON the appliance Check and clean the air inlet and outlet if they are blocked
E2 or E02	1, Overheating protection 2, Damage of temperature sensor	1, Remove the cookware from the appliance. Let the appliance cool down 2, Contact retailer.
E3 or E03	Protection of over-low or over-high voltage, or impact current	Make sure the appliance is connected to the correct input voltage

#### If you cannot remove the malfunctions:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
- type of malfunction.
- article and serial number (rating plate at the rear of the device);
- date of purchase.



#### **V. How to Clean**

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using it every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooking on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use a vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).