



MAXIMA DOUBLE INDUCTION COOKER 7000W

09371550



USER MANUAL



Dear customer:

Thank you for purchasing the induction hotplate. please read this instructions manual carefully before using and keep it cautiously for your future reference. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt.

In case of visible damage, do not connect the plug to the socket, and contact your stockiest or our customer service center.

Electrical connection or installation: User must make sure that all electrical appliances system connected to ground wire fulfilling present safety standards. The induction cooker must be installed by qualified personnel or technicians.

Without connection to earth wire or incorrect installation may cause serious damage (hurt or electric shock). Even though these cases rarely happen, the technicians have to install a electric protection air switch to meet the safety standards. The manufacturer and distributors has no responsibility for the damages caused by incorrect installation.

The installer must ensure the correct electrical connection and compliant with safety regulations. The cable must not be bent or compressed. The cable must be checked regularly and replaced by authorized technicians only.

When the cable is connected to electrical power, the earth wire must be longer



than other wires, connected at the first, and disconnected finally.

Safety instruction

Please read carefully the following instructions before using the induction cooker.

- 1). Do not plug with wet hands in order to avoid getting electric shock.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the power cord is damaged or the plug does not fit the socket safely.
- 4). Do not open the cooker to replace spare parts by yourself.
- 5). Do not use the cooker closed to flame or wet places.
- 6). Do not use where children can easily touch the cooker, or allow children to use the cooker by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the cooker together with a pot.
- 9). Do not heat a pot empty or overheat to avoid dry boiling.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off to avoid the possibility of electric shock and



then take to the service center immediately.

15). Do not block air intake or exhaust vent.

16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.

17). Do not place the cooker close to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards or cassette tapes.

18). The power cord must be replaced by qualified technicians.

19)  CAUTION: Hot surface.

20) This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

21) The temperature of accessible surfaces may be high when the appliance is operating.

22) Aluminum foil and plastic vessels not placed on hot surfaces.

23) the glass-ceramic surfaces are not to be used for storage.

24) metallic objects such as kitchen utensils, cutlery etc. shall not be placed on the hob surface within the cooking zones since they could get hot;

25) take care when operating the appliance, as rings, watches and similar objects worn by the user could get hot when in close proximity to the hob surface

26) only use vessels of the type and size recommended.


27) After use, switch the hob element off by means of its control. Do not rely on the pan detector.

28) appliance not to be cleaned with water jet;



29) any repairs shall be carried out only by persons trained or recommended by the manufacturer.

30) care be taken to ensure that the splash back and surrounding area free of metallic surfaces

32)  non-ionizing electromagnetic radiation

33) Appliance is not intended to be operated by means of an external timer or separate remote-control system.

Warning: Children should be supervised to ensure that they do not play with the appliance.

Warning:

1) please be noted this equipment have the fan on the bottom. please insure there is no wisp or wastepaper under the induction cooker. If these wisp are blew up, it maybe damage the fan or influence the heat removal system. silver foil, flammable objects or liquid(such as spray) can' t put inside the cabinet or near the equipment.

It maybe explosive

2)If the self-protection function of the induction cooker is invalid during cooking, maybe cause fire. If the fire is caused by oil, do not put off fire by pouring water unto it. Place a lid to cover the fire and switch off the electric current.

3)when cooking please put the food inside of the cookware, do not put the food on the top of the induction cooker for cooking directly.

4)Before move the induction cooker, make sure the electric power has been disconnected from the main kitchen connector.


5)This induction cooker conform to the running safety regulations and electro magnetic compatibility regulations. But the person who using the electronic

pacemaker should not use this equipment. Because it is impossible to ensure all these kind of products in the market conform to the running safety regulations and electro magnetic compatibility regulations, and can't ensure that they may have the unsafety interruptions. the person who using other instrument, for example the Cardio assist, maybe also feel uncomfortable.

Specification

- 1). Item No.: 09371550
- 2). Power Rate: 7000W
- 3). Voltage: 380-420V 3N~ 50-60Hz

Electrical schematic diagram

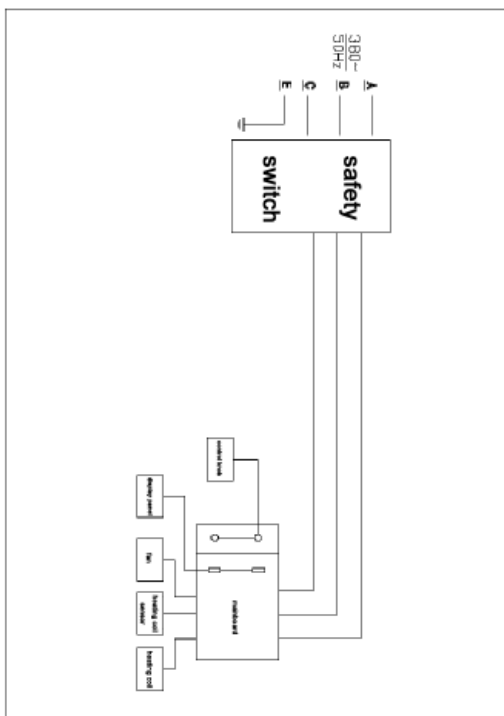



How to Use



Zone 1, power level:
800W,1800W,2000W,2200W,2400W,2600W,2800W,3000W,3200W,3500W

Zone 2, power level:
800W,1800W,2000W,2200W,2400W,2600W,2800W,3000W,3200W,3500W,5000W

- 1). Please put suitable cookware onto the plate of induction cooker, and connect the plug cord correctly. Then you can adjust the knob to get different power level. please be kindly noted that before the induction cooker begin to work, the tick mark on the knob should be on the position of ON/OFF
- 2).When on the state of working, adjust the knob clockwise to increase the power, adjust the knob counterclockwise to decrease the power. Please be kindly noted that the left knob control the Zone 1 from 800-3500W, the right knob control the Zone 2 from 800-5000W.
- 3). The zone 2 have the power share function. When the two zone are working at the power of 3500W, the zone 2 can increase the power to 5000W, then the power of zone 1 can decrease to 2000W automatically, max of the total power is 7000W
- 4). When you finish cooking, set both adjustment knobs to OFF positions (rotate '0' marking of the adjustment knob to the set value indicator). After stopping working, the fan will cool down the induction cooker for one minute, and then will be off.
- 5). If there are no new settings introduced during operation, the appliance will

switch off automatically after 4 hours.

6).The temperature of accessible surfaces may be high when the appliance is operating.

Usable and Non-usable Utensils

1). Usable Pans

 
Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 14 to 28cm.



2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots.

Rounded-bottom pans/pots with bottom measuring less than 14cm.



How to Clean

1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.

2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.

3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.

4). Wipe using dish washing agent and damp cloth.

5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.

6). Never run water over the unit (Water gets inside may cause malfunction).



Possible malfunctions

If there are any disruptions in the device operation and the display will show an error code check with the table below if the problem can be solved before you contact the customer service or supplier.

Error Message	Cause	Solution
E0	No pan on the hob or not suitable cookware	Place the appropriate cookware with food on the hob
E1 or E01	Internal temperature of the appliance is too high or the fan inside is not working	Made sure there is a minimum distance of 10cm between the ventilation slot and any obstruction such as a wall or other appliances. Unplug, let the appliance cool down, plug back in and switch ON the appliance Check and clean the air inlet and outlet if they are blocked
E2 or E02	1, Overheating protection 2, Damage of temperature sensor(working for about 1 minutes then display E2)	1,Remove the cookware from the appliance. Let the appliance cool down 2,Contact retailer.
E3 or E03	Protection of over-low or over-high voltage, or impact current	Make sure the appliance is connected to the correct input voltage

If you cannot remove the malfunctions:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
 - type of malfunction;
 - article and serial number (rating plate at the rear of the device);
 - date of purchase.